



The Go-Mite is a unique bag that can attach to multiple styles of dry type bags.

## Mounting instructions

### Bungee Cord System

This is the easiest method of attachment. Simply pull the Go-Mite apart, separating the front and back, using the top as a hinge. Slide the back portion of the Go-Mite behind your bungee cords and push the front side down onto the bungee cords. The pressure on the front piece should engage the Velcro® on the back and hold the bag firmly in place.

### 1" straps

If you have a 1" wide webbing strap on your bag of choice, simply open the attachment clip on the top of your Go-Mite, slide it on, then snap it closed. See Fig. 1.

### 2" Strap

If you have a 1 1/2" or 2" webbing strap on your bag, slide on your webbing adapter (fig 3.) It has a 1" webbing loop sewn to it. Then follow method #2 for the 1" strap.

### Extra support


If you install the Go-Mite on a 1" or 2" strap, it may sway with the movement of the pack. To minimize this, we have included a female surface attachment buckle that can be mounted to your existing bag. It accepts the male buckle on the back of the Go-Mite.

This requires you to punch 3 small holes in your current bag. Please use the provided template here for hold placement. See Fig. 2.

Figure 1



Figure 2

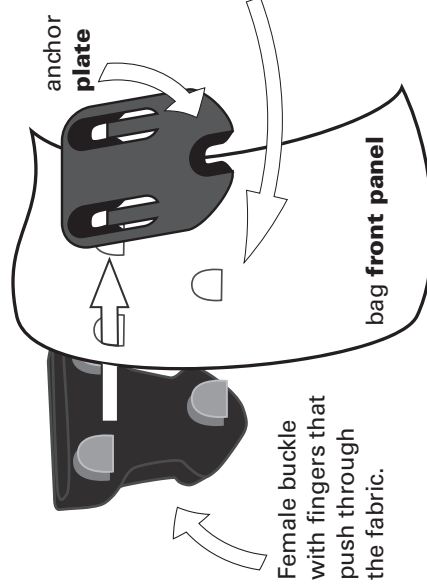


Carefully mark the hole positions on your bag front. Cut as small a hole as needed.


Once the holes are cut, push the buckle fingers through the holes. Use the anchor plate to secure the buckle in place.

The anchor plate will fit on the buckle fingers and slide down into a locking position.

Figure 3

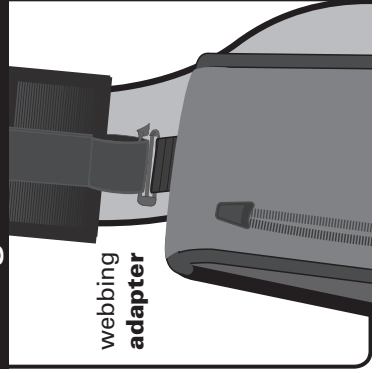

Use this template to mark your hole spacing for the anchor buckle; once you have determined where the buckle needs to be placed.

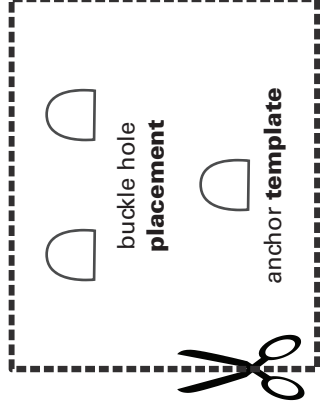

For increased waterproofness, apply a small amount of silicone to the back of your buckle to seal the holes when you attach it to the bag.

Seattle Sports products are guaranteed for workmanship and materials for one year. Should this product fail during its warranty period, Seattle Sports will repair or replace the product at their discretion after product inspection. Please write Seattle Sports Company for a return authorization at 6200 Seaview Ave. NW Seattle, WA 98107. This warranty is void with commercial use and in no event should the Seattle Sports Company be liable for incidental or consequential damages. Due to the fact that Seattle Sports is not in control of how the Rod Holder is attached, Seattle Sports disclaims any and all liability for damage or injury which might occur as a result of the improper use or installation of this product.

Seattle Sports Company  
Manufacturers of Superior Outdoor Gear  
© 2006 copyright, Seattle Sport Co.  
seattlesportsco.com  
800 632 • 6163